 




APX-110N5 Outdoor Wireless AP/Client/Bridge

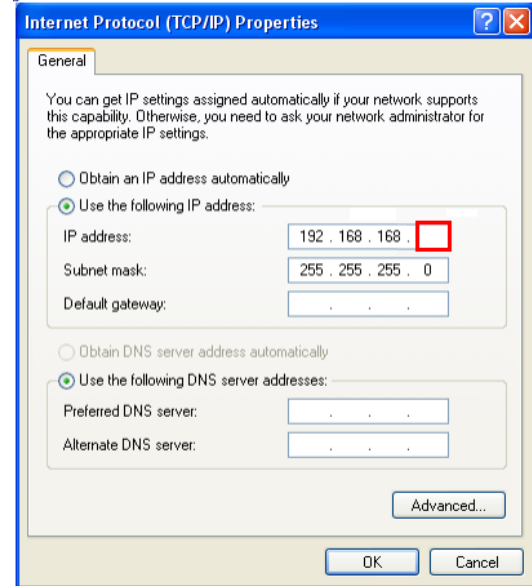

Step 1: Hardware Configuration

- A) Set the computers IP address to be on the same subnet of the APX-110N5
- B) Connect the APX to a PoE injector

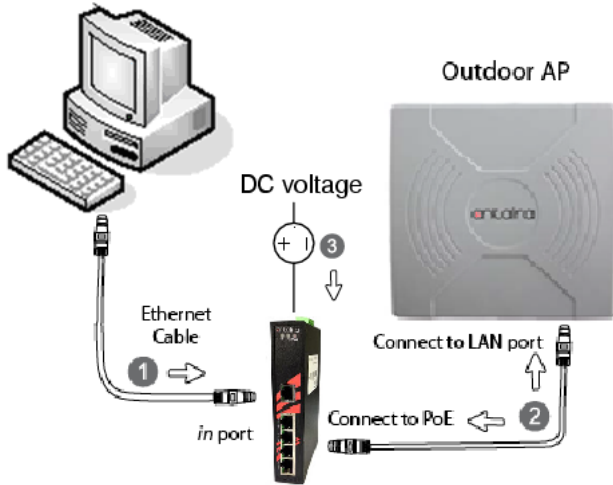

Step 2: Configuring the Device

A) Access Point WDS Procedure

- Login with Default IP 192.168.168.1
- Login: admin Password: password
 - Change IP address under Basic Network
- Go to Radio 1, under basic wireless
- Set Wireless mode as Access point WDS
- Set any security features
- Apply and save settings

B) Station WDS Procedure

- Login with Default IP 192.168.168.1
- Login: admin Password: password
 - Change IP address under Basic Network
- Go to Radio 1, under basic wireless
- Set Wireless mode as Station WDS
- Apply change
- Site Survey and select AP-ESSID
- Enter security settings
- Apply and save Settings



BASIC WIRELESS SETTINGS

